

LIST OF PARTS

1 Barrel	26 Trigger	54 Trigger Guard	81 Firing Pin Catch Stop
2 Front Sight	27 Trigger Rivet	55 Trigger Guard Plate	82 Stop Spring
3 Front Sight Screw	28 Trigger Pin	56 Trigger Guard Screw (2x)	83 Support Front Screw
4 Front Sight Cover	29 Trigger Rod Pin	57 Rear Stock Screw	84 Support Rest Screw
5 Front Sight Base	30 Trigger Rod	58 Magazine Shell	85 Trigger Spring
6 Rear Sight Leaf	31 Trigger Rod Nut	59 Magazine Follower	86 Trigger Pin
7 Rear Sight Leaf Spring	32 Trigger Spring Washer	60 Magazine Follower Spring	87 Retaining Ring (2x)
8 Rear Sight Blade	33 Trigger Pull Spring	61 Magazine Base	88 Set-trigger Lever Spring
9 Rear Sight Windage Screw (2x)	34 Bolt Guide	62 Magazine Plunger	89 Set-trigger Lever
10 Rear Sight Slide	35 Bolt	63 Magazine Plunger Spring	90 Trigger Set Screw (B)
11 Rear Sight Locking Piece	36 Extractor	64 Magazine Shell	91 Nylon fishing-line (2x)
12 Locking Piece Spring	37 Holder	65 Magazine Follower	92 Pin
13 Rear Sight Base	38 Extractor Spring	66 Magazine Follower Spring	93 Trigger Pull Spring
14 Rear Sight Base Pin	39 Safety	67 Adapter Body	94 Trigger Support
15 Receiver	40 Bolt Handle	68 -	95 Adjusting Screw, Trigger Pull (A)
16 Magazine Housing	41 Striker	69 -	96 Locking Nut
17 Magazine Housing Front Screw	42 Striker Spring	70 -	97 Locking Nut
18 Magazine Housing Rear Screw	43 Striker Spring Support	71 -	98 Adjusting Screw, Trigger Overtravel (C)
19 Magazine Catch	44 Stock	72 Barrel	99 Trigger Lever
20 Magazine Catch Spring	45 Butt Plate	73 Front Sight	100 Adjusting Screw, Set- Trigger
21 Magazine Catch Pin	46 Butt Plate Screw (2x)	74 Front Sight Cover	101 Fore End Band
22 Sear	47 Front Stock Screw	75 Rear Sight Leaf	102 Fore End Band Screw
23 Sear Steel Ball	48 Front Escutcheon	76 Rear Sight Base	103 Fore End Band Nut
24 Sear Spring	49 Sling Swivel Assembly	77 Rivet	
25 Sear Pin	50 Sling Swivel Wood Screw	78 Slide	
	51 Sling Swivel	79 Trigger Mechanism Support	
	52 Sling Swivel Screw	80 Firing Pin Catch	
	53 Elastic Spacer		

